


LUBRICATION OIL APPLICATION INSTRUCTION

FOR OIL RESERVOIR

APPLICATION POSITION

CAUTION:

1. Please apply the oil **ONLY** under this situation: There is no oil spilt, when you press the reservoir. (If the oil spilt, that means there is enough oil for use.)
2. Please apply 3 drops for each time.

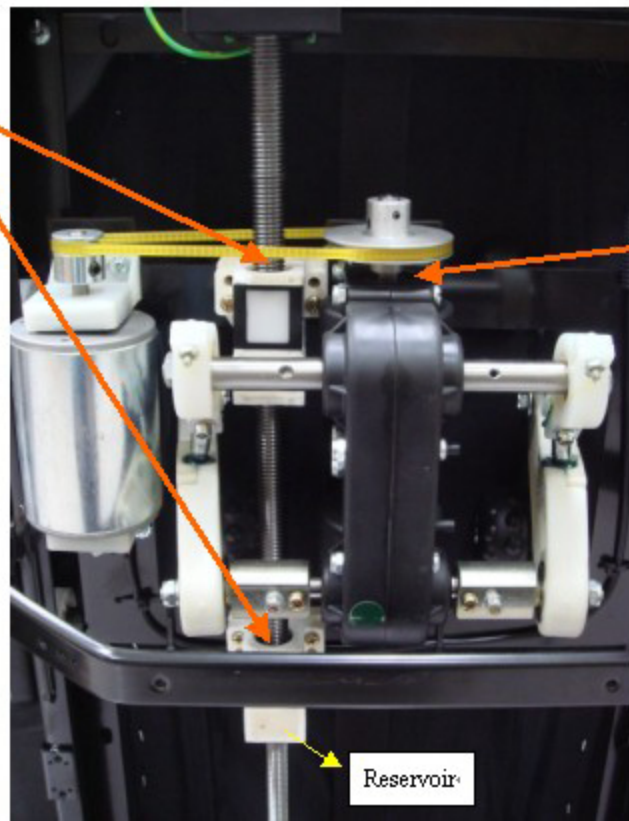

FOR GEARBOX

APPLICATION POSITION

CAUTION:

1. Please **DO NOT** apply the oil on the belt or stain the belt, which will cause the gearbox idle running.
2. Please apply 2 drops at most. Otherwise, the oil may spill out.