




1.

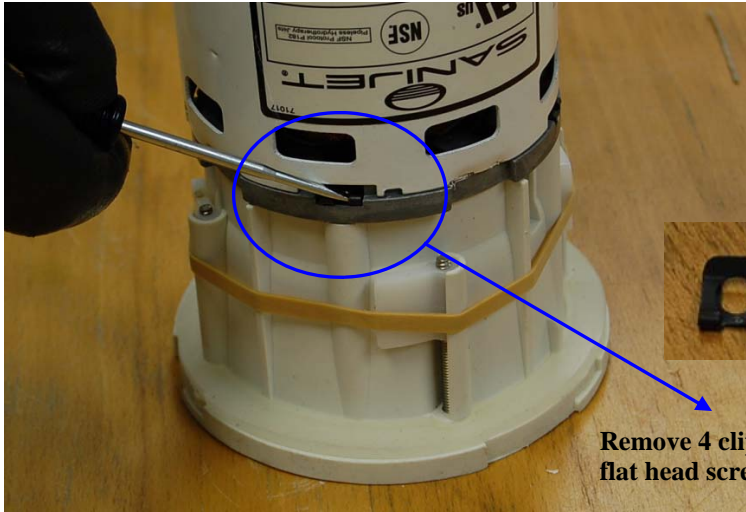

Remove 4 clips by using flat head screw driver.

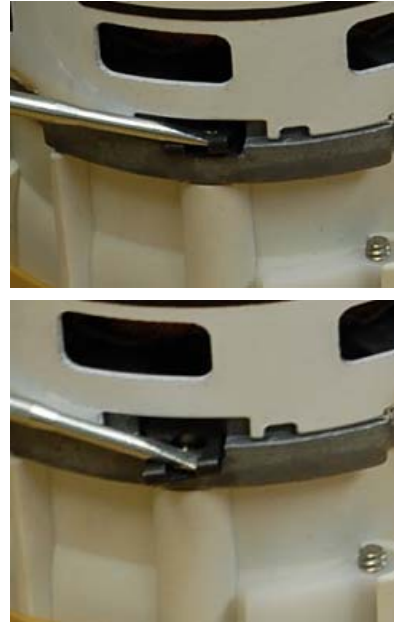

2.

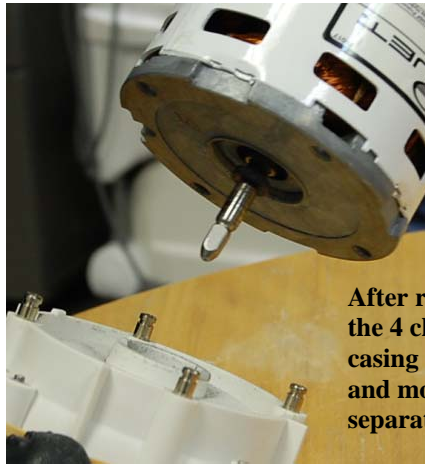

After removing the 4 clips the casing assembly and motor gets separate.



Clean motor surface before attaching new casing assembly.

WARNING: Do not clean with Water.

3.



Find the groove located on motor and align casing assembly to fit correctly.



Put the new clips came with casing assembly.