

HOW TO REPLACE REMOTE WIRE

STEP 1. DISCONNECT REMOTE WIRE FROM REMOTE




STEP 2. UNSCREW 4 SCREWS AROUND POWER BOX



STEP 3. SEPARATE THE REMOTE WIRE FROM POWER BOX



STEP 4. LIFT THE BACK REST, FABRIC LINER, DISCONNECT WIRE FROM PCB

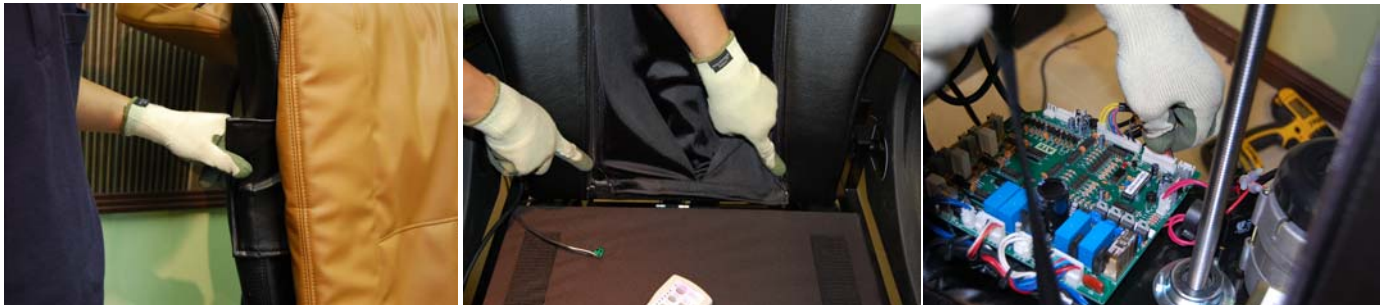

STEP 5. REPLACED WITH NEW WIRE AND PUT THEM ALL TOGETHER.

STILL PROBLE? CALL 631-243-3336 X. 121