



INSTRUCTION





- 1) MARK AND PRE-DRILL 1/8 INCH DIAMETER HOLES IN TEN PLACES ON THE BACK OF THE ARM TRAY AS PER FIGURE#3
CAUTION: MAXIMUM DRILL DEPTH IS 1/4 INCHES. DO NOT DRILL COMPLETELY THROUGH
- 2) INSTALL HINGES AND SUPPORT BRACKET ON THE BACK OF THE ARM TRAY AS PER FIGURE#4 BY USING SCREW TYPE A
- 3) MARK AND PRE-DRILL HOLE LOCATIONS ON THE ARMREST WALL AT DESIRED HEIGHT
- 4) AFFIX ARM TRAY TO THE ARMREST BY USING SCREW TYPE B
- 5) PRE-DRILL AND INSTALL STOPPER RING AS PER FIGURE#5,6 BY USING SCREW TYPE C

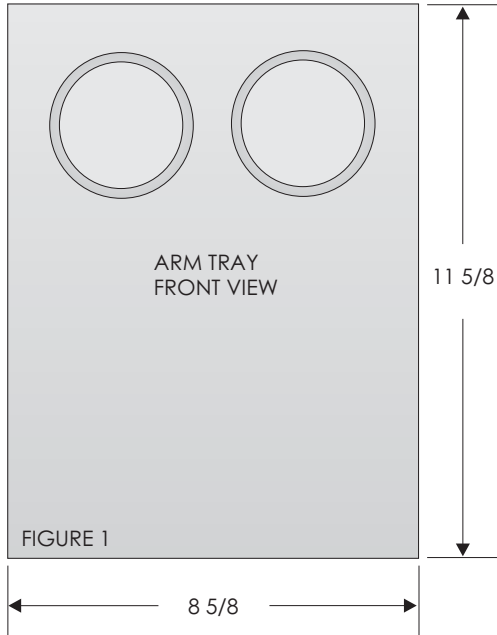

PLACE THE HINGE ON THE EDGE OF THE ARM TRAY

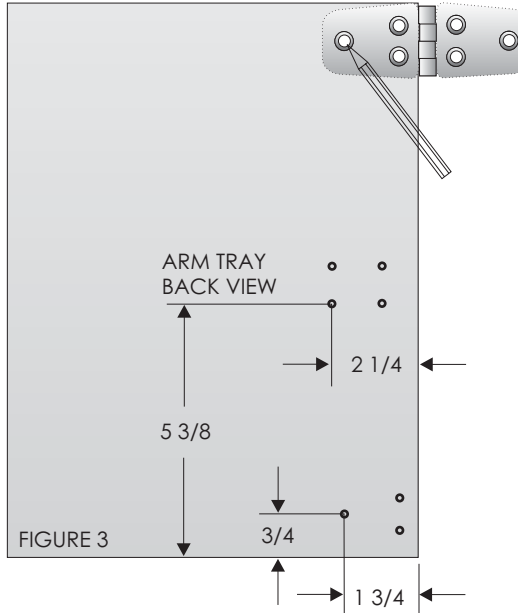

PRE DRILL FIRST, THEN INSTALL HINGES

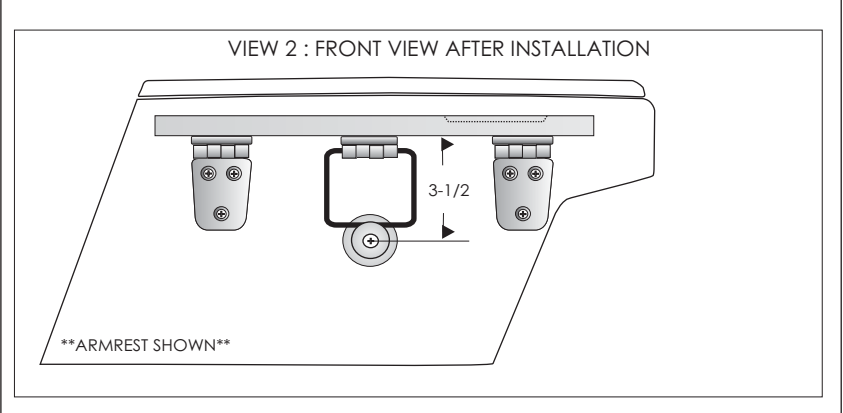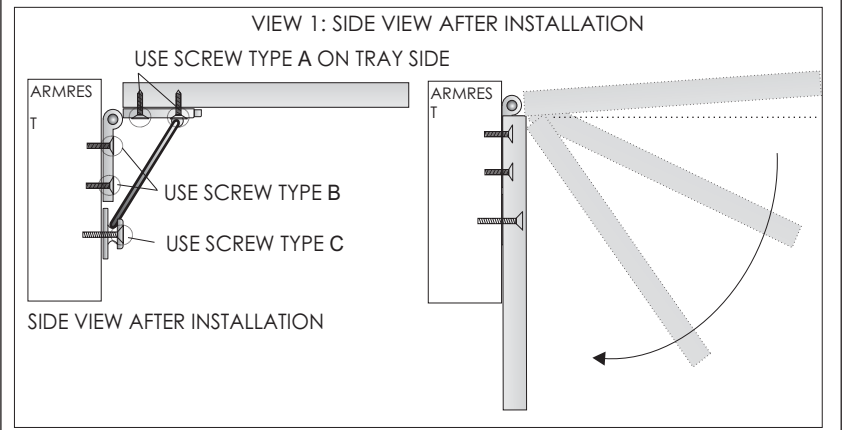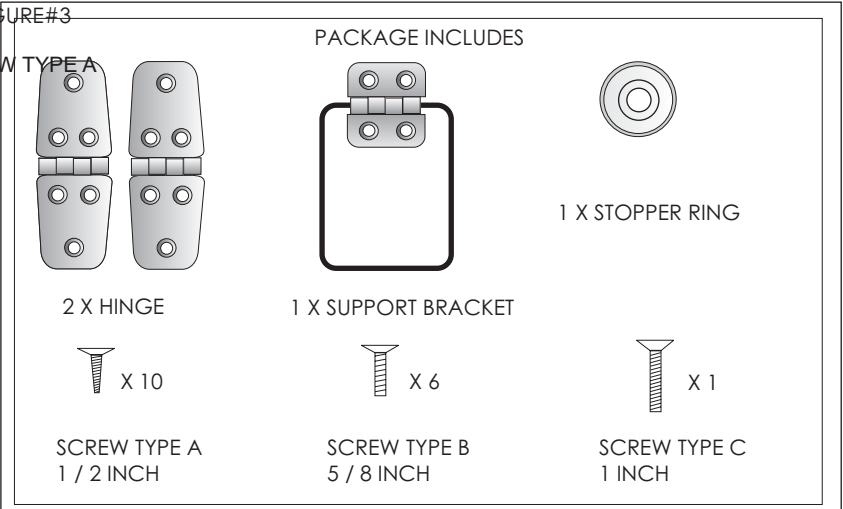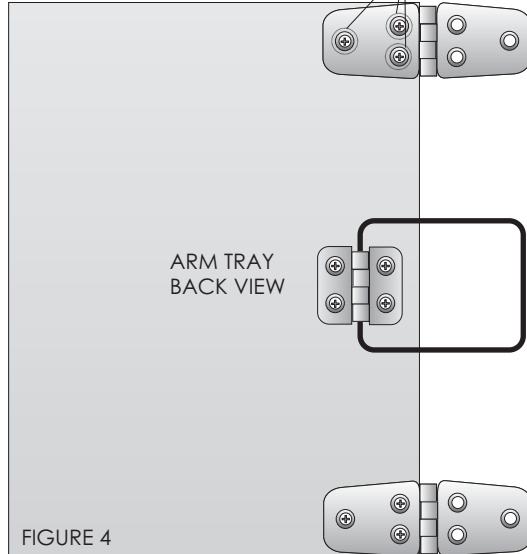

**DIMENSIONS ARE NOT DRAWN TO SCALE
**MEASUREMENTS ARE APPROXIMATE AND SUBJECTED TO NORMAL TOLERANCE